

Fox ESS Inverter & Battery Configuration Guide

For All countries except Italy and US:

Inverter Model Battery Model	H1/AC1 (Battery Qty Min.~Max.)	H3/AC3 (Battery Qty Min.~Max.)	KH/KA (Battery Qty Min.~Max.)	AIO-H1/AIO-AC1 (Battery Qty Min.~Max.)	AIO-H3/AIO-AC3 (Battery Qty Min.~Max.)
HV2600	2~7	3~8	2~8	2~4	4
Mira-HV25	2~7	3~8	2~8	N/A	N/A
CM2800&CS2800	(1CM+1CS)~(1CM+6CS)	(1CM+2CS)~(1CM+6CS)	(1CM+1CS)~(1CM+6CS)	N/A	N/A
CM2900&CS2900	(1CM+1CS)~(1CM+6CS)	(1CM+2CS)~(1CM+6CS)	(1CM+1CS)~(1CM+6CS)	N/A	N/A
CM4100&CS4100	(1CM+1CS)~(1CM+6CS)	(1CM+2CS)~(1CM+6CS)	(1CM+1CS)~(1CM+6CS)	N/A	N/A
CM4300&CS4300	(1CM+1CS)~(1CM+6CS)	(1CM+2CS)~(1CM+6CS)	(1CM+1CS)~(1CM+6CS)	N/A	N/A
CM4800&CS4800	(1CM+1CS)~(1CM+6CS)	(1CM+2CS)~(1CM+6CS)	(1CM+1CS)~(1CM+6CS)	N/A	N/A

- 1 When 1CM+2CS or 3 HV/Mira-HV batteries connected with H3: Black Start of system is not supported.
- 2 Black Start: Start inverter without PV and Grid,only start with battery.

For Italy only(Due to CEI-021 certificate):

Inverter Model Battery Model	H1/AC1 (Battery Qty Min.~Max.)	H3/AC3 (Battery Qty Min.~Max.)	KH/KA (Battery Qty Min.~Max.)	AIO-H1/AIO-AC1 (Battery Qty Min.~Max.)	AIO-H3/AIO-AC3 (Battery Qty Min.~Max.)
HV2600	2~7	4~8	2~8	2~4	4
Mira-HV25	2~7	4~8	2~8	N/A	N/A
CM2800&CS2800	(1CM+1CS)~(1CM+6CS)	(1CM+3CS)~(1CM+6CS)	(1CM+1CS)~(1CM+6CS)	N/A	N/A
CM2900&CS2900	(1CM+1CS)~(1CM+6CS)	(1CM+3CS)~(1CM+6CS)	(1CM+1CS)~(1CM+6CS)	N/A	N/A
CM4100&CS4100	(1CM+1CS)~(1CM+6CS)	(1CM+3CS)~(1CM+6CS)	(1CM+1CS)~(1CM+6CS)	N/A	N/A
CM4300&CS4300	(1CM+1CS)~(1CM+6CS)	(1CM+3CS)~(1CM+6CS)	(1CM+1CS)~(1CM+6CS)	N/A	N/A
CM4800&CS4800	(1CM+1CS)~(1CM+6CS)	(1CM+3CS)~(1CM+6CS)	(1CM+1CS)~(1CM+6CS)	N/A	N/A

If system is installed outside of guidelines for Battery Qty Min.~Max.,Fox ESS reserves the right to reject warranty.